



## **S-19 Wireless CO<sub>2</sub> Sensor Quick Start Guide**

Thank you for your purchase of the OmniSense S-19 Wireless CO<sub>2</sub> Sensor. Follow the steps below to install your sensor and view data readings.

### **1 Create a OmniSense Monitoring account if you do not already have one**

- You will need a monitoring account and a "online" gateway to see live data on your job site
- see "Monitoring Quick Start Guide" available at <http://shop.omnisense.com> for instructions on creating your account

### **2 Install the S-19 Wireless CO<sub>2</sub> Sensor**

- Choose a suitable location which is well ventilated. Do not block the sensor's vent holes.
- Sensor should be within wireless range of a gateway which is typically 100 meters (333 feet)
- Connect the supplied AC adapter to 100-240 VAC AC power and plug the DC plug into in the DC barrel jack. The power LED on the front panel should be on solid indicating power is on.

### **3 Viewing your sensor data**

- see "Monitoring Quick Start Guide" for instructions on viewing data through your OmniSense monitoring account
- The default sensor reading interval is 5 minutes and you should see your first reading within 5-10 minutes of powering the sensor on. The reading interval can be changed remotely by contacting us.